


Owner's manual Giove PS7

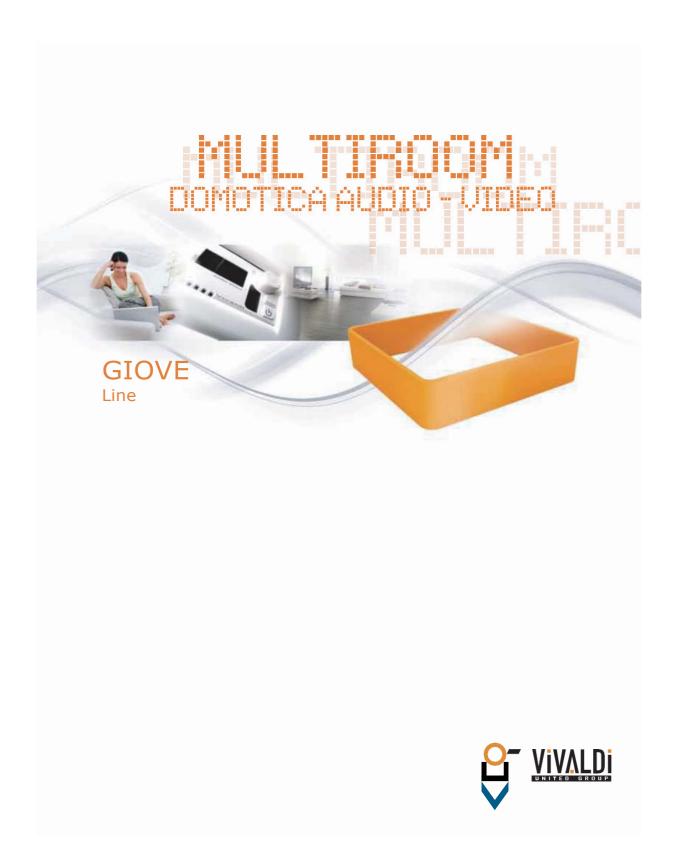

PS7 Card views

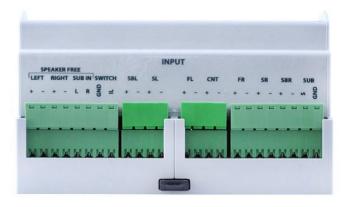


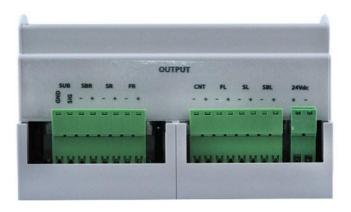



PS7 connection diagram

Commands Giove Free, Freenet, iFree

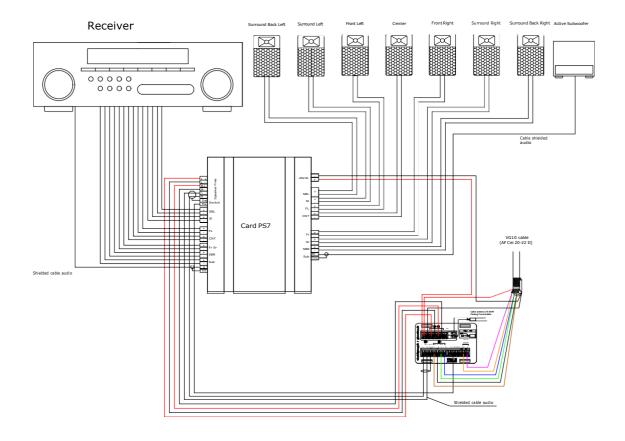

In Vivaldi systems equipped with Free, Freenet, iFree series zone control, the Giove PS7 switching board allows you to manage 7 speakers and a Subwoofer.

Using the diagram in Figure 1 when the zone control is switched on, the Front and Surround speakers are disconnected from the amplifier and connected to the RC20 control, two per channel, for a total of 4 speakers.

During the operation of the zone control, the Surround Back and Center speakers are disconnected from the system. When the control is switched off, all the speakers are reconnected to the amplifier.

Installation Notes

For the installation of the PS7 card it is recommended to follow some precautions that guarantee its correct functioning:

- 1. For the connection of the speakers use good quality cable, with a minimum cross-section of 1 mmg.
- 2. It is preferable not to pass the lines of the speakers in the same passages of the 230 Vac lines of the network.
- 3. If the previous point cannot be respected, it is advisable to use shielded cable for the speakers.
- 4. If the PS7 card is installed in a DIN panel, a special panel must be set up for audio equipment, the proximity to power lines can be a source of disturbance.
- 5. For the connection of the Subwoofer use shielded cable of good quality, the type recommended by us is microphone audio cable with total shielding.

This cable can be ordered by us with the code Micro2 and being of small diameter (4 mm) allows the laying in pipes even of small diameter.

Description and features

Speaker switch/switch board. Type of use:

Home Cinema systems. Inputs: 7 x Surround

Speakers + Subwoofer 2 x Speakers + Subwoofer (from Vivaldi Free Series)

1 x Activation Command

Outputs: 7 x Speakers + 1 x Subwoofer.

Functions: Switches the connection of 4 speakers + 1 Subwoofer, from the surround system amplifier to the Vivaldi Free-FreeNet or iFree series zone control.

Stops connecting 3 diffusori, Central and Surround Back. It has the front and rear speakers in parallel during operation with the Free system.

Power supply 24Vdc - 200 mA max The PS7 card can be powered by the same zone command line.

White color.

Dimensions 106x90x58 (WxHxD) mm.

Weight 0,45 Kg.

Vivaldi srl in the constant commitment to improve its products reserves the right to make technical and aesthetic changes without any obligation to give notice.

