

SMALTIMENTO:

Questo simbolo indica che, a fine vita del prodotto in oggetto a questo documento, deve essere raccolto separatamente dagli altri rifiuti.

L'utente dovrà farsi carico di conferire il prodotto ad un idoneo centro di raccolta differenziata, oppure di riconsegnarlo al rivenditore all'atto dell'acquisto di un nuovo prodotto.

L'adeguata raccolta differenziata dei RAEE contribuisce ad evitare possibili effetti negativi e nocivi per l'ambiente e la salute favorendo anche il reimpiego e/o riciclo dei materiali che compongono l'apparecchiatura.

Verificare sempre le disposizioni vigenti nel proprio comune e/o territorio.

DISPOSAL:

This symbol indicates that, at the end of the life of the product referred on this document, it must be collected separately from other waste.

The user must undertake to deliver the product to a suitable separate waste center, or to return it to the reseller upon purchasing a new product.

Adequate separate collection of WEEE helps to avoid possible negative and harmful effects on the environment and health, also favoring the reuse and/or recycling of the materials that make up the equipment.

Always check the provisions in force in your municipality.



VIVALDI s.r.l.

Address: Via E. Fermi, 8 - Z.I. Est - 30020
Noventa Di Piave (VE) - Italy

Phone: +39 0421 307825

Fax: +39 0421 307845

Mail: info@vivaldigroup.it

Web: www.vivaldigroup.it

DIMENSIONI / DIMENSIONS

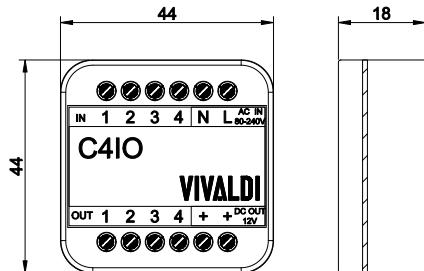


Fig. 1



VIVALDI

C4IO



ITA

Interfaccia di comando per dispositivi Vivaldi

ENG

Interface for Vivaldi devices

ATTENZIONE

Il dispositivo deve essere installato prestando attenzione ai collegamenti e a quanto segue:

- Rispettare i parametri di alimentazione indicati in questo manuale.
- Il dispositivo deve essere installato in apposite scatole di derivazione o in un luogo dove l'operatore non possa avere contatto diretto con esso.
- Il dispositivo deve essere installato e messo in funzione da un tecnico specializzato.
- Il dispositivo non deve essere smontato, aperto o manomesso.
- Il dispositivo deve essere protetto da un interruttore onnipolare conforme all'allegato L dello standard EN-62368-1.
- Si consiglia l'utilizzo di cablaggi con sezione superiore allo 0.5mm² e che siano conformi alla IEC-60332-1-2/IEC-60332-1-3.

WARNING

The device must be installed keeping attention at the cabling and at the following points:

- Respect the power supply parameters indicated in this manual.
- The device must be installed in appropriate junction boxes or in a place where the operator cannot have direct contact with it.
- The device must be installed and configured by an authorized technician.
- The device must not be disassembled, opened or tampered.
- The device shall be protected by an omnipolar switch conforming to Annex L of EN-62368-1.
- We recommend the use of wiring with section greater than 0.5mm² and conforming to IEC-60332-1-2/IEC-60332-1-3.

DESCRIZIONE

- 1 Alimentazione 80-240Vac (Corrente alternata)
- 2 Ingressi per pulsanti / encoder
- 3 Uscite per spie 12Vdc (Corrente continua)
- 4 +12Vdc comune per pulsanti e spie (Corrente continua)
- 5 Wifi 2,4GHz b/g/n

DESCRIPTION

- 1 Power Supply 80-240Vac (Alternate current)
- 2 Push button / encoder inputs
- 3 Indicator light outputs 12Vdc (Direct current)
- 4 +12Vdc common for lights and buttons (Direct current)
- 5 Wifi 2,4GHz b/g/n



ITA

FUNZIONAMENTO

- Dopo aver eseguito correttamente tutti i collegamenti, alimentare il dispositivo.
- Tra le reti WiFi cercare l'SSID denominato C4IO_XXXXXX dove il suffisso "XXXXXX" corrisponde agli ultimi tre ottetti del MAC address ed è univoco per ogni dispositivo.
- Collegarsi alla rete utilizzando la password di default "12345678"
- Digitare nella barra del browser: "http://c4io-xxxxxx.local" dove "xxxxxx" deve essere sostituito con i caratteri presenti nell'SSID (oppure 192.168.4.1).
- All'interno della webpage:

1. Selezionare la rete WiFi alla quale ci si vuole connettere nel menu a tendina, inserire la password, premere "Connett!" e confermare il riaffio del dispositivo. Dopo il riaffio, il dispositivo si conterà alla rete WiFi selezionata e la pagina si ricaricherà se il PC è collegato alla stessa rete del dispositivo.

2. Nella sezione "API" selezionare il dispositivo da controllare dal menu a tendina. Inserire nel campo "Prefix" il prefisso MQTT del dispositivo da comandare. (vedere sezione API della webpage del dispositivo comandato).

3. Impostare gli step di volume % di variazione.

4. Configurare i parametri di connessione al broker MQTT. (Broker disponibile nei dispositivi da comandare, vedi istruzioni dispositivo)

5. Configurare le azioni che deve compiere ogni ingresso utilizzando i menu a tendina. Nel caso di utilizzo del regolatore di volume rotativo TVE, attivare la funzione "Encoder" e impostare le azioni dai menu a tendina.

6. Configurare le funzionalità delle spie tramite i menu a tendina della sezione "Uscite".

7. Alla fine della pagina web sono presenti dei pulsanti per funzionalità aggiuntive.

Rete

Reti WiFi Disponibili
MikroTik_Test | RSSI: -49 - CH: -

Password

Aggiorna Connetti Salva

SPECIFICHE TECNICHE

Alimentazione

Tensione 80-230 Vac

Consumo max 100mA

WiFi

Tipo 802.11 b/g/n

Frequenza di lavoro 2.4 GHz

Ingressi / Uscite

Tipo Positivo comune 12Vcc max.
50mA

Ingressi 4 per pulsanti

Uscite 4 per spie 12Vdc

Dati meccanici e requisiti ambientali

Dimensioni max (LxHxP) mm 44 x 44 x 18

Peso 50 g

Installazione ad incasso

Temp. funzionamento -5 ... +50 °C

Umidità relativa 5 ... 80 %

Protezione IP IP 20



ENG

OPERATION

- After all connections have been made correctly, power up the device.
- Among the WiFi networks, look for the SSID called C4IO_XXXXXX where the suffix "XXXXXX" corresponds to the last three octets of the MAC address and is unique for each device.
- Connect to the network using the default password "12345678"
- Type in the browser: "http://c4io-xxxxxx.local" where "xxxxxx" must be replaced with the characters present in the SSID (or 192.168.4.1).
- Inside the webpage:

- Select the WiFi network you want to connect to in the drop-down menu, enter the password, press "Connect!" and confirm the restart of the device. After restarting, the device will connect to the selected WiFi network and the page will reload if the PC is connected to the same network as the device.

- In the "API" section, select the device to control from the drop-down menu. Enter the MQTT prefix of the device to be controlled in the "Prefix" field. (see API section of the webpage of the controlled device).

- Set the % change volume steps.

- Configure the MQTT broker connection parameters. (Broker is available in the devices to be controlled, see device instructions).

- Configure the actions each input must take using the drop-down menus. If using the TVE rotary volume regulator, activate the "Encoder" function and set the actions from the drop-down menus.

- Configure the functions of the lights using the drop-down menus in the "Outputs" section.

- At the end of the web page there are buttons for additional features.

TECHNICAL SPECIFICATIONS

Supply

Voltage 80-230 Vac

Max consumption 100mA

WiFi

Type 802.11 b/g/n

Frequency 2.4 GHz

Input / Output

Type Common positive 12Vdc
max.50mA

Inputs 4 for push button

Outputs 4 for 12Vdc indicator lights

Mechanical and environment

Dimensions max (LxHxP) mm 44 x 44 x 18

Weight 50 g

Installation recessed

Working temp. range -5 ... +50 °C

Humidity range 5 ... 80 %

Safety

IP grade IP 20

